



de	Montageanleitung	cs	Montážní instrukce
en	Mounting instruction	nl	Montage-aanwijzing
fr	Instructions de montage	no	Montasje rettledning
sv	Monteringsinstruktion	es	Instrucciones de montaje
it	Istruzioni di montaggio	da	Monteringsvejledning
fi	Asennusohje	ru	Инструкция по установке
zh	安装指南	ja	インストールガイド

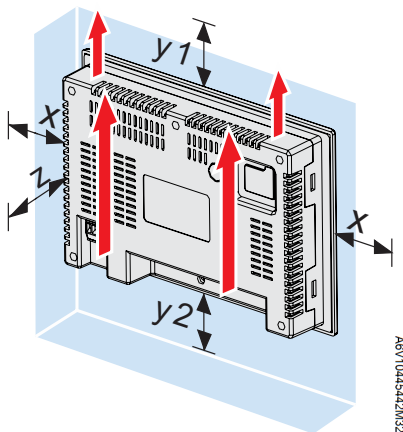


	x	y1	y2	z
POL8T2.70/STD	10	10	75	25

de	Abstand (mm)
en	Clearances (mm)
fr	Dégagements (mm)
sv	Frigång (mm)
it	Spazi (mm)
fi	Välykset (mm)
zh	设备间隙 (mm)
cs	Odbavení (mm)
nl	Spelingen (mm)
no	Klaringer (mm)
es	Espacios libres (mm)
da	Pladskrav (mm)
ru	Зазоры (mm)
ja	コントローラとコンピュータとの接続 (mm)

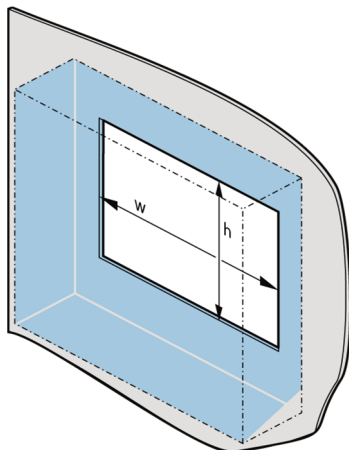


	w	h
POL8T2.70/STD	210 mm	144 mm

de	Aussparung
en	Cut-out
fr	Découpe
sv	Utskärning
it	Cut-out
fi	Cut-out
zh	安装孔尺寸
cs	Cut-out
nl	Cut-out
no	Cut-størrelse
es	Del recorte
da	Cut-størrelse
ru	Вырез
ja	カットサイズ

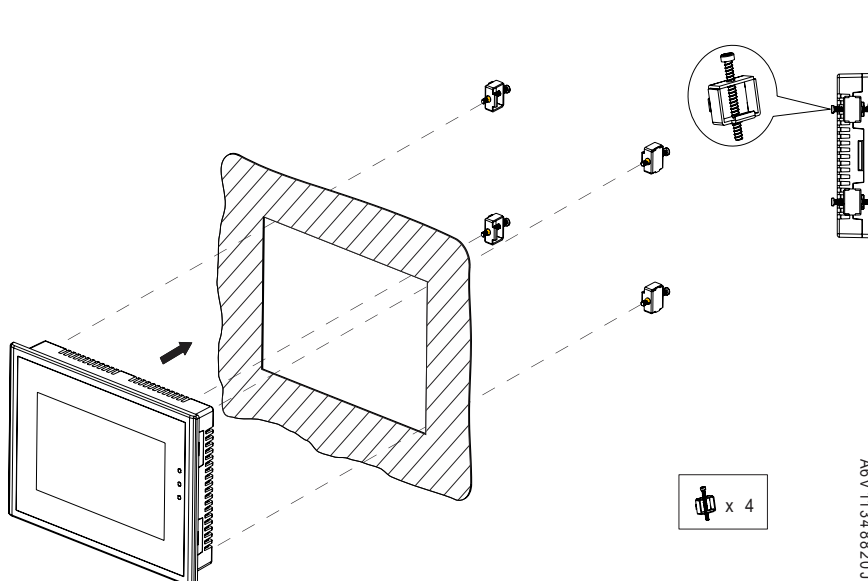

de	Schaltschrankmontage
en	Panel mounting, peer to peer
fr	Montage du panneau
sv	Panelmontage
it	Montaggio a pannello
fi	Tauluasennus
zh	采用点对点，面板安装
cs	Montážní panel
nl	Paneelmontage
no	Panelmontering
es	Montaje en panel
da	Panel montering
ru	Панель монтаж
ja	パネル取り付け

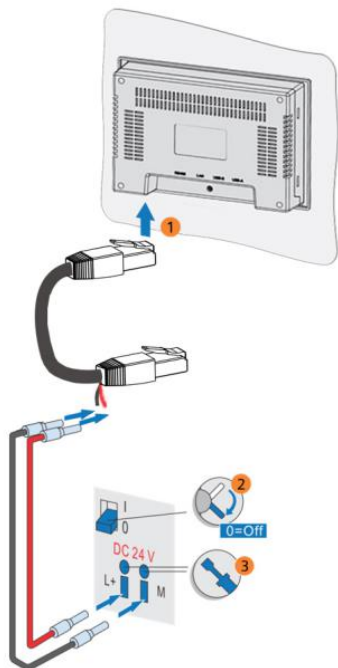


de	Netzanschluss
en	Power connections
fr	Connexion d'alimentation
sv	Strömanslutning
it	Collegamento di potere
fi	Virtaliitäntä
zh	连接电源
cs	Připojení napájení
nl	Stroomverbinding
no	Strømtilkoblingen
es	Conexión de alimentación
da	Strømtilslutningen
ru	Подключение питания
ja	電源接続


Configuration PC



Climatix touch panel

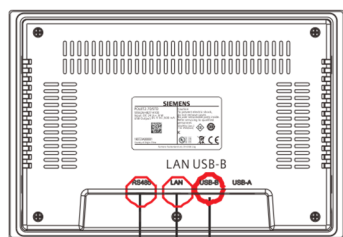

Climatix controller

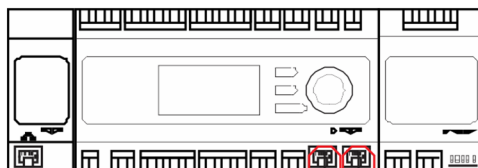

de	Verbindungen zu Regler und PC
en	Connections with controllers and PC
fr	Les connexions avec les contrôleurs et PC
sv	Anslutningar med styrenheter och PC
it	Connessioni con controllori e PC
fi	Yhteyksiä säätimet ja PC
zh	连接控制器与电脑
cs	Spojení s řadiče a PC
nl	Verbindingen met controllers en PC
no	Tilkoblinger med kontrollere og PC
es	Conexiones con un controllers y PC
da	Tilslutninger med kontrollere og pc
ru	Связи с контроллерами и ПК
ja	コントローラと PC との接続